


Torque wrench

263

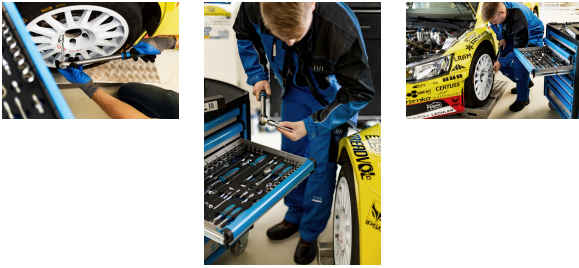

Usage



Profiles



 
Product features

- Accuracy: +/-3%
- micrometer scale for simple and error free settings
- adjustment lock to set torque
- QUICK ADJUSTMENT - Just eight turns to cover the entire scale
- Torque application: both way, but always apply in direction specified on torque wrench handle
- handle: Two component material
- dual scale lbf.ft and Nm
- Convenient hanger feature for tool storage also aids wrench unlocking and adjustment
- 5° working angle

Important!

- Do not use torque wrench for untightening!
- Torque tightens only in the direction showed on the key sticker! Sticker shows the proper direction of tightening!
- The default calibration interval of the torque wrench is 12 months or 5.000 measurements from the date of end user purchase.

- ALWAYS set the measuring mechanism to starting point, at the end of work.
- When the requested torque is reached, please do not tight any more.
- Torque wrench can be damaged, if manual instructions are not considered.



Barcode	Drive Size	Nm	lb.ft	L	Weight
626765	3/8"	12 - 60	10 - 45	328	700
626766	1/2"	40 - 200	30 - 150	459	1000
626767	1/2"	60 - 340	50 - 250	679	1550

Retail packaging

Barcode	MA	MB	MC	Weight
626765				
626766				
626767				

Transport packaging

Barcode	Hand	TA	TB	TC	Weight
626765					
626766					
626767					