 


Slipper torque wrench - 264



Description

- reversible ratchet head
- Torque application: oneway, but always apply in direction specified on torque wrench handle
- ratchet operates in clockwise and anti-clockwise directions
- for tightening on left and right hand threads
- unmistakable signal when set torque is reached
- Default value for the recalibration interval is 12 month of use, or approximately 5.000 cycles!
- made according to standard ISO 6789
- dual scaled, Nm and Kgm

Important!

- Do not use torque wrench for untightening!
- Torque tightens only in the direction showed on the key sticker! Sticker shows the proper direction of tightening!
- The default calibration interval of the torque wrench is 12 months or 5.000 measurements from the date of end user purchase.
- ALWAYS set the measuring mechanism to starting point, at the end of work.
- When the requested torque are reached, please do not tight any more.
- Torque wrench can be damaged, if manual instructions are not considered.

Technical Data

Barcode	Color	Range	L	Weight	Box	Weight
615485	1/4"	2 - 24	270	686	1S	1
615486	3/8"	5 - 110	360	1100	1S	1
615487	1/2"	28 - 210	465	1680	1S	1
615488	1/2"	35 - 350	640	2930	1S	1
615489	3/4"	70 - 560	840	5600	1S	1
615490	3/4"	140 - 700	1070	8200	1S	1
615491	1"	140 - 980	1220	8800	1S	1

Packaging data

Barcode	Color	Retail tool packaging			Transport package					
		A	B	C	Weight	A1	B1	C1	Weight	
615485	1/4"	315	72	72	686	1	-	-	-	-
615486	3/8"	400	73	60	1100	1	-	-	-	-
615487	1/2"	485	78	63	1680	1	-	-	-	-
615488	1/2"	670	79	63	2930	1	-	-	-	-
615489	3/4"	115	1250	115	5600	1	115	1250	115	5600
615490	3/4"	115	1250	115	8200	1	115	1250	115	8200
615491	1"	115	1250	115	8800	1	115	1250	115	8800