

# Dropout alignment gauges

#### 1692/4



<u>(/eng/support/waranty)</u>

### Usage



Profiles


#### Product features

- material: premium flex plus carbon steel
- surface finish: blacken to standard DIN 50938

#### How to use the tool:

• To use, remove the wheel and insert the tool into the frame. This tool is used for the alignment of the rear triangle and dropouts.

	D	В	L	<b>1</b>		
618412	30	84	309,5	1222		

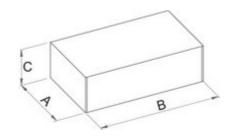

## Retail packaging

				i i	
618412	336	38	90	1292	
Transport packaging	)				
				TA di	

618412

1